

USB VoIP Phone

User Manual for MAC OS X



Free calls over internet Caller ID function Easy use

1. Instruction

1.1 Summary

Plugging USB VoIP Phone into your computer's USB port, you can make and receive skype calls. Phone rings for all incoming calls. You can select one from Skype contact list or press SkypeOut numbers to make calls on the phone. With LCD, keypad and ringer, it is easily used as mobile phone.

1.2 Features

1. With LCD, keypad and ringer, easy to use like mobile phone
2. Phone rings for all incoming calls, ring style selectable
3. Caller ID function of skype calls
4. Dial skype contact and Skypeout number by phone keypads
5. Echo cancellation, noise reduction, duplex communication
6. Driver and sound card built-in, no external power required

1.3 System Requirements

1. Macintosh computer with G3, G4 or G5 processor
2. Mac OS X v10.3 or newer
3. Free USB1.1 or USB2.0 port
4. 128MB RAM and 20MB free disk space
5. Any broadband connection or minimum 33.6 Kbps dialup

1.4 Package Contents

1. One USB VoIP phone
2. One user manual

2. Keypad Instruction



◀/▶: Tab

- (1) Scroll the Skype tab from left to right.
- (2) Scroll the calls while use on hold function.

▲/▼: Up/Down

- (1) Scroll the contacts or call list.
- (2) Adjust the volume when talking.

: Dial/Answer

- (1) Call out or Answer a call.
- (2) Put call on hold/release call when talking.

: Hang up

Hang up a call or refuse incoming call.

C: Delete Key

- (1) Press to clear any numbers you have entered for a call.
- (2) Press to scroll the Skype tab.
- (3) During a call you can press “C” to enable mute, press “C” again to disable mute. (It is supported by Skype 1.4.0.27 or above.)

* +: Press to input “00” at ready status, else input “*”.

🎵: Press to scroll ringer style at ready status, else input “#”.

3. USB VoIP Phone Installation

3.1 Install the Skype Software

Note: If you have previously installed the Skype software, proceed to **3.2**

- ▣ Download Skype software and install it (www.skype.com). The version must be 1.3.0.17 or higher.
- ▣ Create a Skype account following the on-screen instructions.

3.2 Connect USB VoIP Phone to PC

- ▣ When USB VoIP Phone is connected to PC, the LCD shows "VOIP PHONE".


3.3 Install the SkypeMate Software

- ▣ Download SkypeMate software and install it.
- ▣ Double click the SkypeMate icon on the desktop, you will be prompted that another program wants to use Skype. Select **Allow this program to use Skype** and click OK.




4. Basic Function


4.1 Call Skype user from Contacts



- Press ◀(IN) and ▶(OUT) to scroll to **Contacts** tab.
- Press ▲ and ▼ to select a contact.
- Press  to call out.

4.2 Call Skype user from Call Lists


- Press ◀(IN) and ▶(OUT) to scroll the **Call Lists** tab.
- Press ▲ and ▼ to select a record
- Press  to call out the contact.

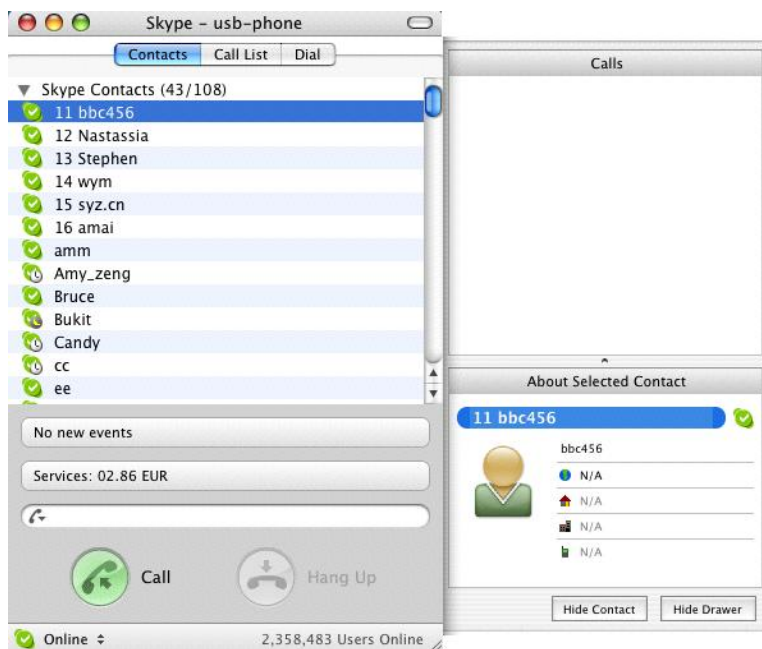
4.3 Call Skype user by Rename



- Rename your contacts begin with digit number, for example, 11, 12, and so on. It shows as above.
- Press “11” on the USB VoIP Phone, then press , the first contact begins with “11” will be called out.
e.g.: If you want call the contact “bbc456”, you just need to press “11” on the USB VoIP Phone, then press  to call out.

4.4 Call to regular phone



- Press "00"+"country number"+"phone number", then press  to call out.

Example: call someone in Beijing, China, please press 00861012345678, and then press .



0086	10	12345678
-----	-----	-----
country code	city code	destination number

Note: If you want to use this function, you should buy SkypeOut Credit from www.skype.com first.


4.5 Answer a call

- When a call comes in, the USB VoIP Phone will ring. Press  to answer the call, or press  to refuse the call.


4.6 Put a call on hold

To place a call on hold, simply press the  key. You can reactivate the call whenever you want, by pressing the  key again.

To make a call while you have a call in progress:

1. Select a contact on Skype **Contact List** or **Call List**.
2. Click the big, green button on Skype interface to call out. The first call is automatically put on hold.
3. Press  to switch between the two calls.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other party.

When you have finished, end each call normally by pressing  key.

5. FAQ

Problem 1

I can't hear other party or other party can't hear me while in talking?

Resolution

Go to “Skype->Preferences->Audio”, set **Audio output** and **Audio input** to **USB Audio Device**, it shows as below:




Problem 2

There is no voice comes out when play music?

Resolution

Go to “System Preferences->Sound”, set the **Output** and **Input** sound device to your **Built-in Audio**, it shows as below:

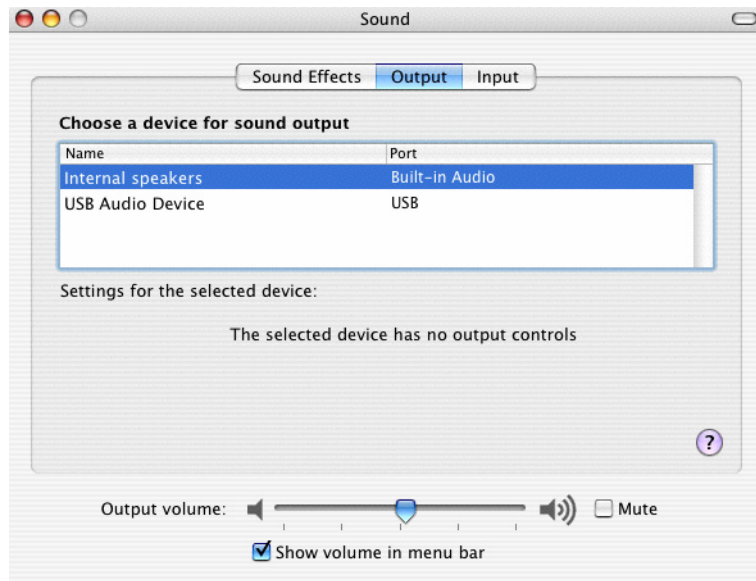

Problem 3

I can't play music through the USB VoIP Phone?

Resolution

Go to "System Preferences->Sound", set the **Output** and **Input** sound device to **USB Audio Device**.

Make sure you didn't mute the **Output volume**.

USB VoIP Phone Ver.1.0

2005-12-26