

USB Adaptor

User Manual for Voipbuster



1. Instruction

1.1 Summary

USB Adaptor is analog telephone adaptor with one USB interface to PC, 1 FXS for regular phone and 1FXO for PSTN call relays. All cordless phones and regular phones can be used to make and receive VoipBuster call. Phone can be used to make regular call at the same time. Phone rings for all incoming VoipBuster and PSTN calls. VoipBuster or PSTN calls is switched by pressing phone key(*).

1.2 Features

1. Supporting DECT, 2.4G, 900M and any other wireless phones
2. Make/Receive both VoipBuster calls and regular PSTN calls
3. Auto-detection and auto-switching to VoipBuster or PSTN calls
4. Phone rings for all incoming VoipBuster and PSTN calls
5. VoipBuster or PSTN calls switched by pressing phone key(*)
6. Using the phone keypads to dial.

1.3 System Requirements

 
1. Windows 2000 or XP
2. 400MHz processor and free USB1.1 or USB2.0 port
3. 128MB RAM and 15MB free disk space
4. Any broadband connection or minimum 33.6 Kbps dialup

1.4 Package Contents

1. One USB Adaptor
2. One USB Cable
3. One Telephone Line
4. One User Manual
5. One Installation CD

2 Using the USB Adaptor

2.1 Connect USB Adaptor to PC

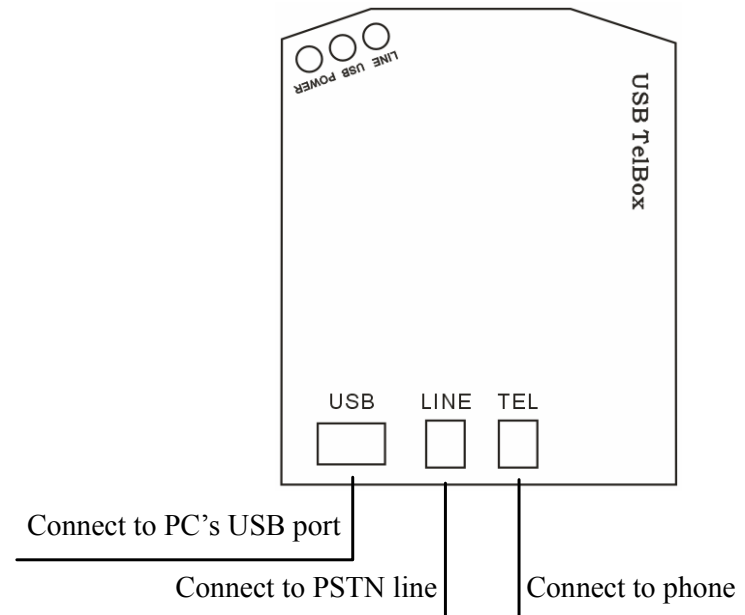

- Connect USB Adaptor to PC, POWER indicator will be on.
- Plug PSTN line in "LINE" port.
- Connect Phone to "TEL" port.

 
2.2 Run VoipBuster


- Download VoipBuster software and install it (www.voipbuster.com), the version must be 2.09 build 305 beta or higher.
- Run VoipBuster and login with VoipBuster account.

You can create a VoipBuster account as shown below:




After the software startup, the icon will appear to the system tray as shown below:

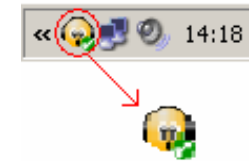

That indicates the VoipBuster is connected to Internet. If it is not, the icon will be shown as . Then you have to check whether PC is connected to internet successfully or not.


2.3 Run VoipBusterMate


- ❑ Insert VoipBusterMate Installation CD or download VoipBusterMate software, and install it.
- ❑ Run VoipBusterMate

Double-click the icon  on the desktop to run VoipBusterMate program, the icon will appear to the system tray as shown below:



That indicates the device and VoipBuster are connected successfully.

If the icon shown as  (grey "V"), please run VoipBuster first.

If the icon shown as  (Red "V"), it means USB Adaptor connected incorrectly. Please reconnect USB Adaptor to PC.

 
Note: When VoipBusterMate startup, the default channel is PSTN.

2.4 Channels Switch

You can press "*" to switch between PSTN and USB channel.

2.5 Call another VoipBuster user (PC to PC)

- ❑ Add "bbc456" to Contacts
- ❑ Set Speed-Dial for it, for example "11"

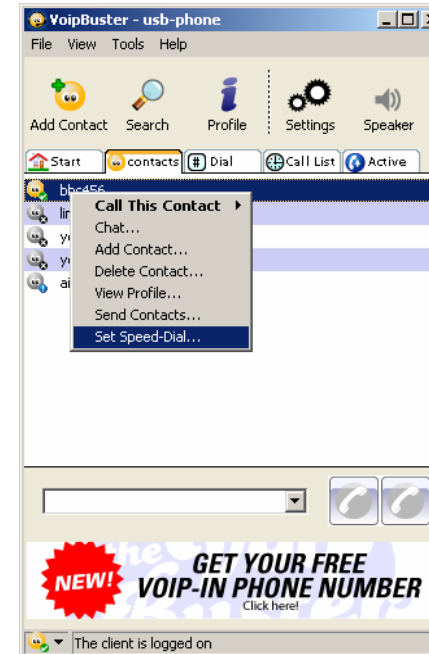

- ❑ Input number and call out:
Press "*" to switch to USB channel, the "USB" indicator is on. Press digital "11" on the phone, this number will be shown on VoipBuster window, and then press "#" to call out. When you hang up, the USB Adaptor switch to PSTN channel automatically.

2.6 Call to regular phone (PC to Phone)

Pressing "00"+"country number"+"phone number"+"#" to call the PSTN number.

Example: call to China, beijing, press 00861012345678, then press "#".

0086	10	12345678
-----	-----	-----
country code	city code	destination number

Note:

- (1) If you are calling any land line in one of the free destinations, it is free.
- (2) Calls to all other (PSTN) phone numbers will be charged the applicable tariff for the destination you are calling. So you should buy some VoipBuster Credit first.

2.7 Make calls through PSTN (Phone to Phone)

Check the PSTN indicator is on, then press the wanted phone number, it will call out directly. If the PSTN indicator is off, press "*" key to make it on first.


Example: call to China beijing 00861012345678

Operation: Input the number 00861012345678


2.8 Answer a call

When a call comes in, the phone will ring. Pick up handset or press handfree key to answer the call.

2.9 Advanced setting

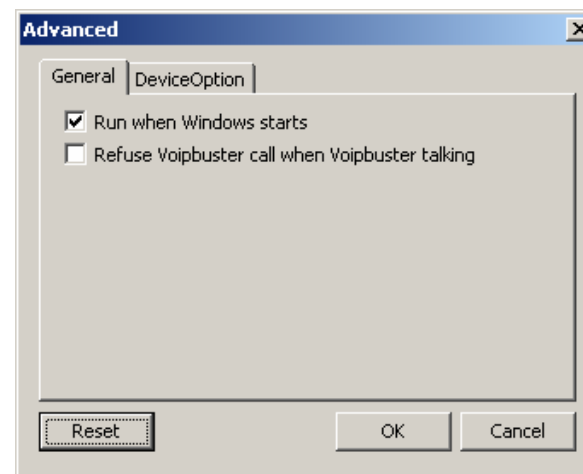

- (1) **Run when Windows starts:** If you select this feature, the VoipBusterMate program will auto run after the computer startup.
- (2) **Refuse Voipbuster call when Voipbuster talking:** If you select this feature, the second incoming call will be refused. Or you can answer the second incoming call by clicking the green big button on Voipbuster interface and hold the preview call at the same time.

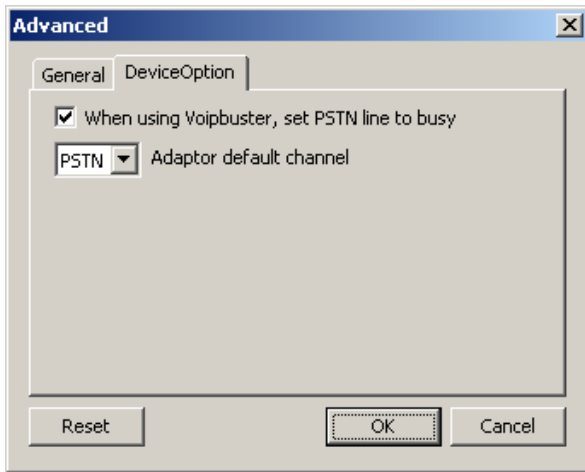

- (3) **When using Voipbuster, set PSTN line to busy:** If you select this feature, when you are talking on Voipbuster, you can't use the PSTN line connected to the USB Adaptor. Or you can use USB and PSTN line at the same time.
- (4) **Adaptor default channel:** There are two channels: "PSTN" and "USB", you can press "*" to switch.


3 FAQ

Problem 1

I am not able to hear any sound through the earphone?

Solution

 Please execute the "Control Panel->Sound and Video (🔊) ->Audio", set **Sound Playback** and **Sound Recording**'s preference device to your sound card. See below:


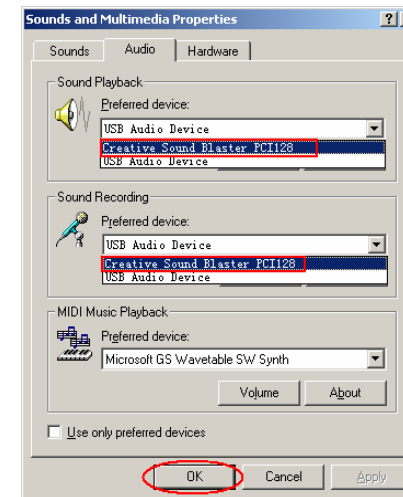


Problem 2

I can't play music through the USB Phone?

Solution

  Please execute the "Control Panel->Sound and Video (🔊) ->Audio", set **Sound Playback** and **Sound Recording**'s preference device to "USB Audio Device".

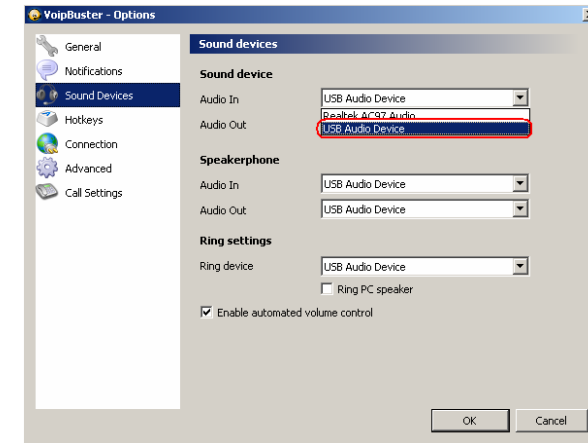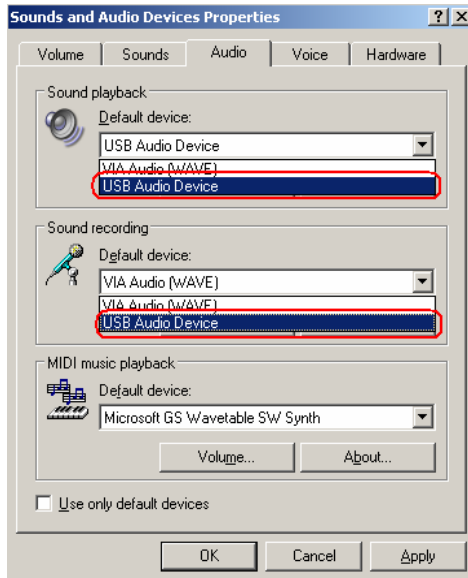

Set “Sound device”, “Speakerphone” and “Ring settings” to “USB Audio Device”.

Off hook, press “*” to switch to USB channel, press any key to cancel the dial tone, then you can hear the music come through the USB Phone.

Problem 3

The voice is played from the PC’s sound card instead of the USB Phone when I make/answer a call?

Solution

Execute “Tools->Options->Sound Devices” to open the window as below: